

Spare parts for Solenoid Switch types SW126 and SW127 (not illustrated)*Also SW126A and SW127A with auxiliary contacts*

Item	Part Number and Description	Quantity per Switch			
		SW126	SW126A	SW127	SW127A
1	Top Cover Fixing Screw				
	2028-513	2	-	-	-
	2028-466	-	2	-	-
	2065-66	-	-	2	-
2	2065-148	-	-	-	2
	Top Cover				
	2028-23A	1	-	-	-
	2028-23B	-	1	-	-
3	2065-171	-	-	1	-
	2065-171D	-	-	-	1
	Terminal Contact Assembly				
	2028-512B	2	2	-	-
4	2065-111E	-	-	2	2
	Moving Contact				
5	2028-48B	1	1	-	-
	2065-24E	-	-	1	1
6	Contact Spring				
	2028-43 (2lb 13oz)	1	1	2	2
7	Stop Washer				
	2028-10K	-	-	1	1
8	Contact Bush				
	2028-24A	1	1	1	1
9	Insulating Washer				
	2028-11B	1	1	2	2
10	Stop Washer				
	2028-10B	1	1	-	-
11	2089-8	-	-	1	1
	Lock Washer				
12	2028-165	1	-	-	-
	Armature Nut				
13	2028-586	1	-	-	-
	2028-454	-	1	-	-
	2065-68A	-	-	1	-
	2065-138	-	-	-	1
14	Assembled Coil and Magnet Frame (Please state full type number of switch) eg SW127A-8M	1	1	1	1
	Micro Switch Spacer				
15	2028-453	-	2	-	-
	2028-453A	-	-	-	2
16	Micro Switch Insulator				
	2028-455	-	2	-	-
17	2065-139	-	-	-	2
	Insulator Fixing Screw				
18	2028	-	4	-	4
	Insulator Fixing Screw Lock Washer				
19	2110-74	-	4	-	4
	Micro Switch Screw				
20	2065-200	-	2	-	2
	Micro Switch Screw and Nut				
21	2065-201	-	2	-	2
	Spring Cover				
22	2028-563	1	1	-	-
	2065-172	-	-	1	1
23	Rectifier Assembly (Please state full type number of switch) eg SW126-19M	As Req'd	As Req'd	As Req'd	As Req'd